




# Samsung Galaxy Player 5.0 Screen Replacement

How to replace the screen on Samsung Galaxy Player 5.0.

Written By: Wenbin Weng

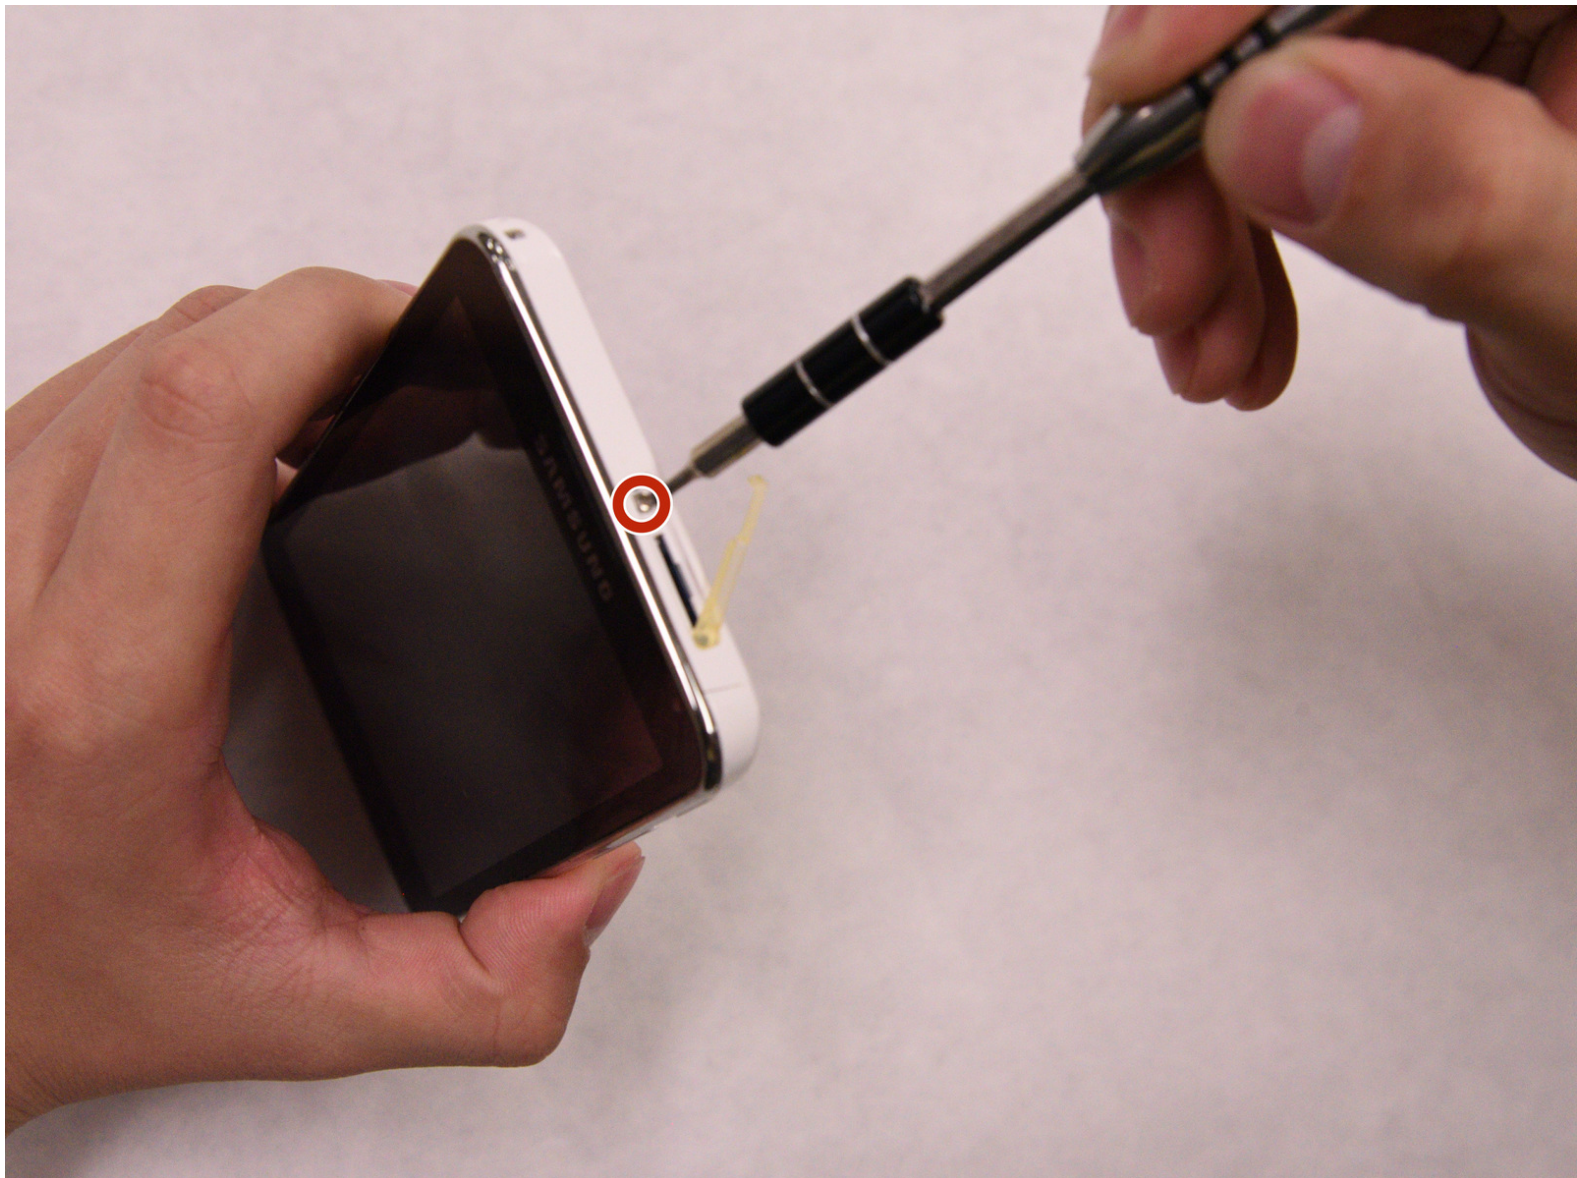

## INTRODUCTION

This guide demonstrates how to remove and replace a cracked or otherwise non-functional screen on a Samsung Galaxy Player 5.0 in order to preserve the function of your device.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)




### PARTS:

- [Galaxy Player 5.0 Display Assembly](#) (1)
-





## Step 1 — Screen

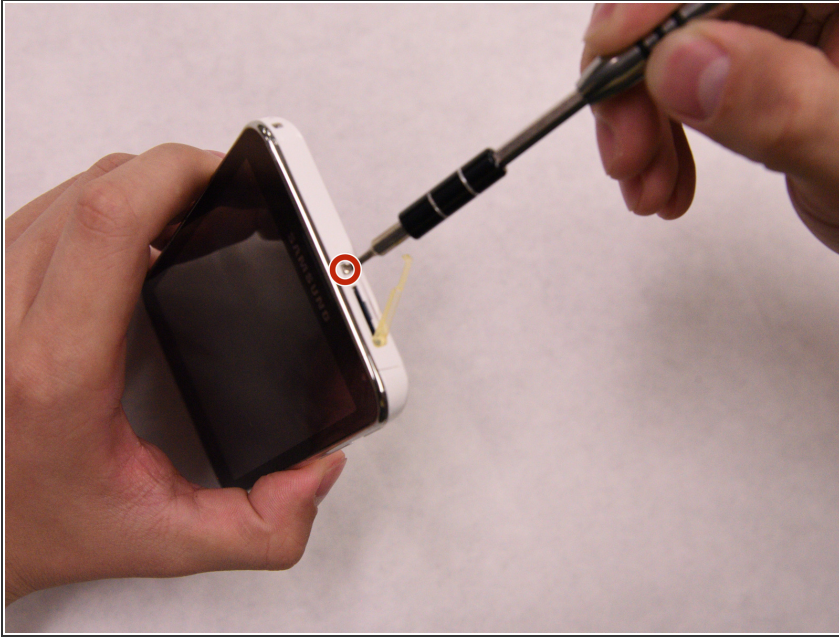


- Remove the SD card before disassembling the device.
- Use a screwdriver to remove the screw near the SD card.

## Step 2

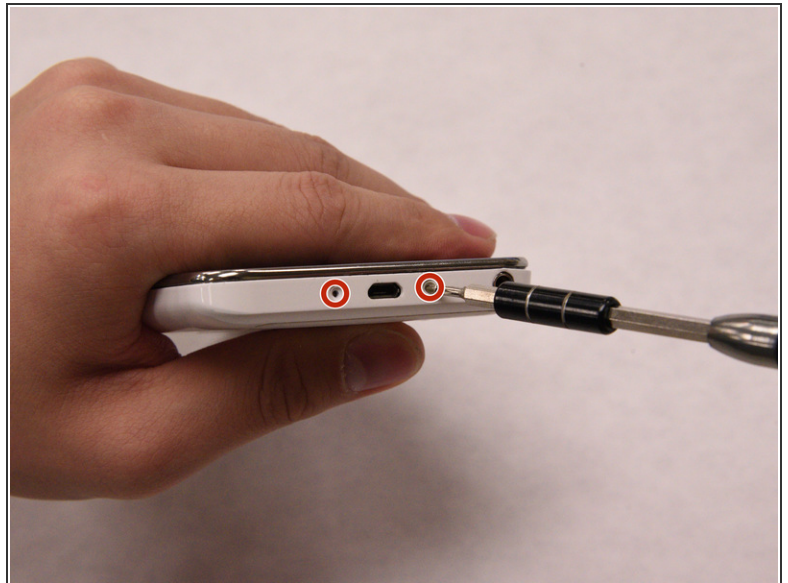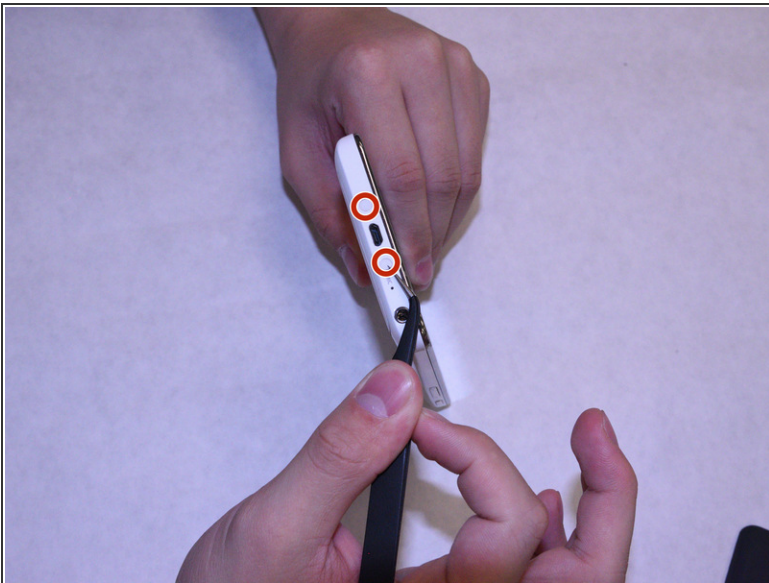


- Go to the bottom of the device and remove the white caps covering the screws.
  - ⓘ If it is difficult to remove the white caps, use a heat blower to heat them before removing them.
- After removing the caps, use a screwdriver to remove the screws at the bottom of the device. Set aside.

## Step 3

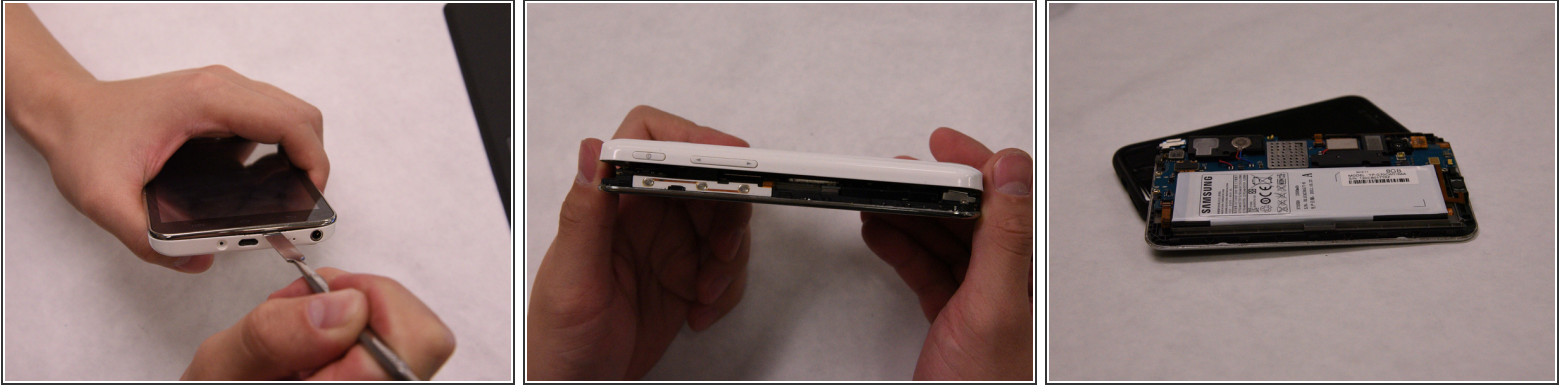

- Starting from the bottom, use a pry tool to separate the front housing cover from the back cover.
  - ⓘ Use a plastic prying tool if you can. Be extremely careful when separating the front housing cover.
- Pull the front and back cover halves apart completely.

## Step 4

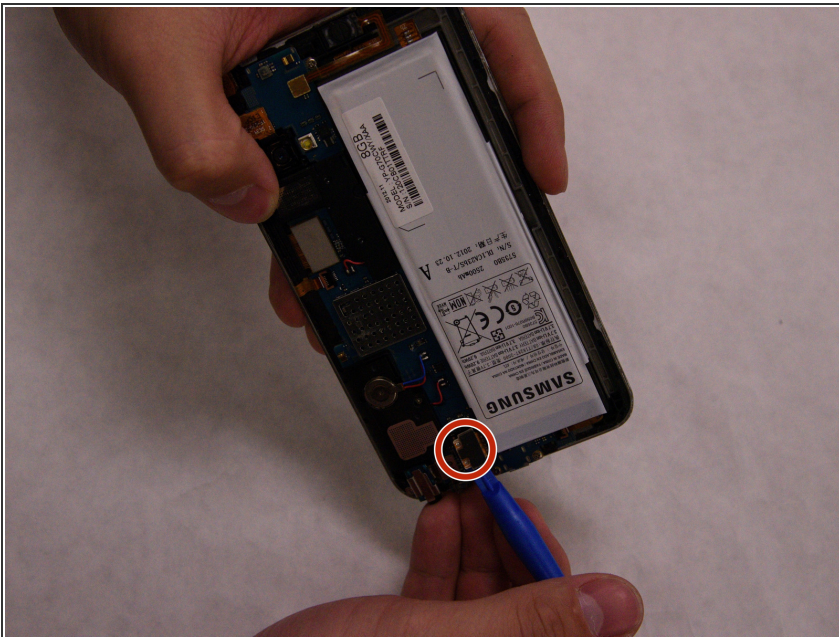

- Use the pry tool to separate the tab connecting the battery and motherboard.




## Step 5



- Use the prying tool to separate the battery from the motherboard.


⚠ Metal spudgers and similar pry tools can puncture an unprotected battery, potentially causing a fire. To be on the safe side, it's better to use a plastic card or nylon spudger.

## Step 6

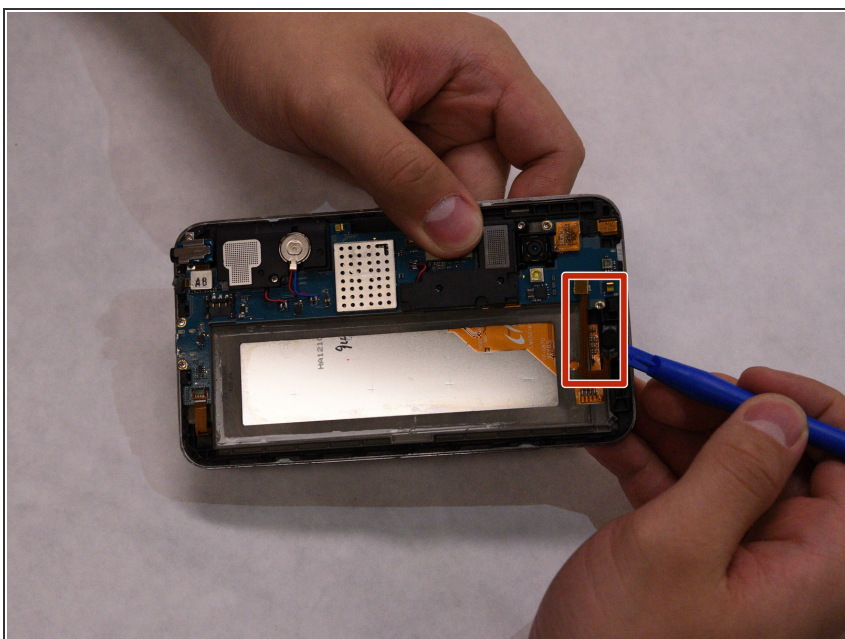


- Remove the air piece using a pry tool. Set aside.

## Step 7

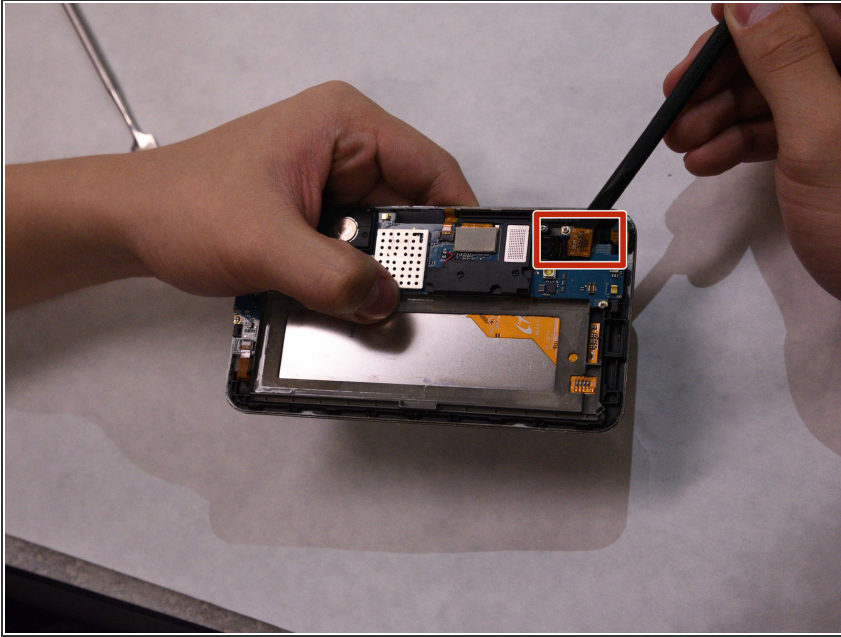

- Remove the front and rear cameras.



## Step 8

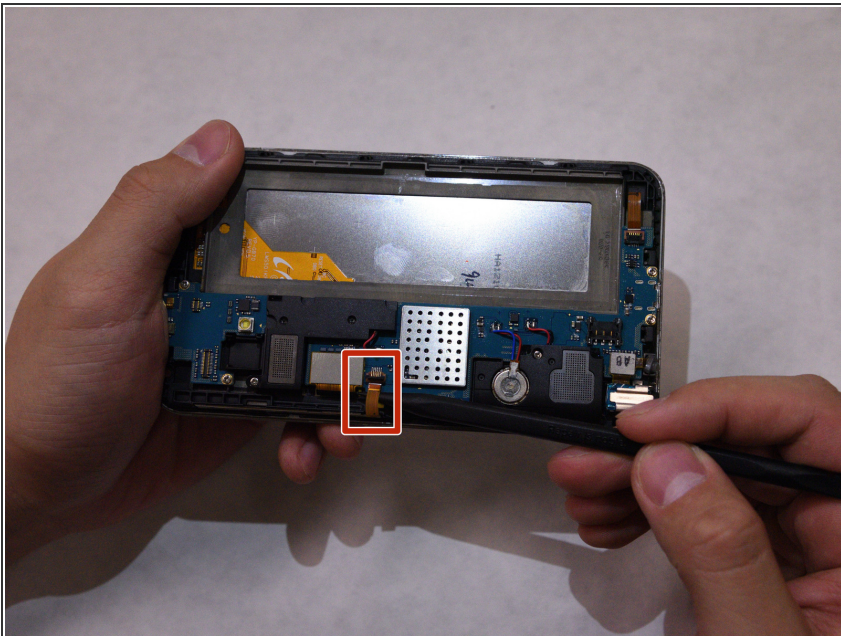

- Disconnect the volume button from the motherboard.
- ⓘ It is not necessary to completely remove the volume buttons from the device after they have been disconnected.




## Step 9

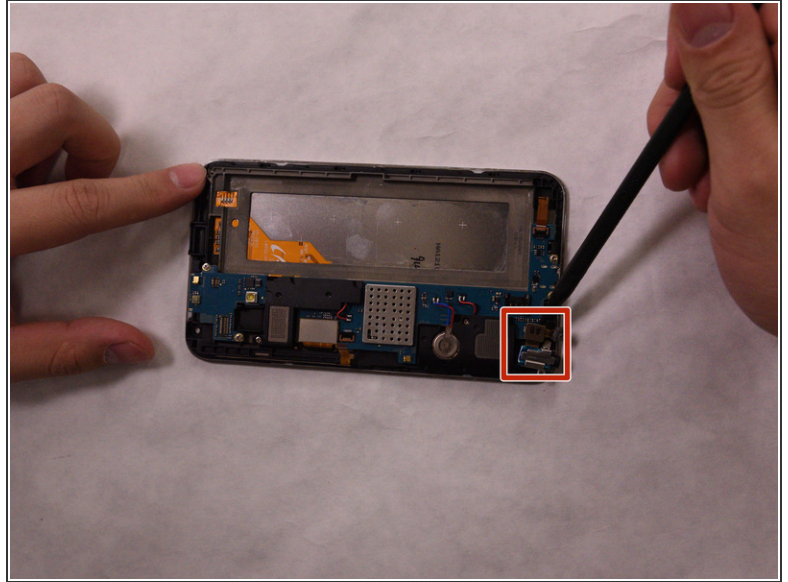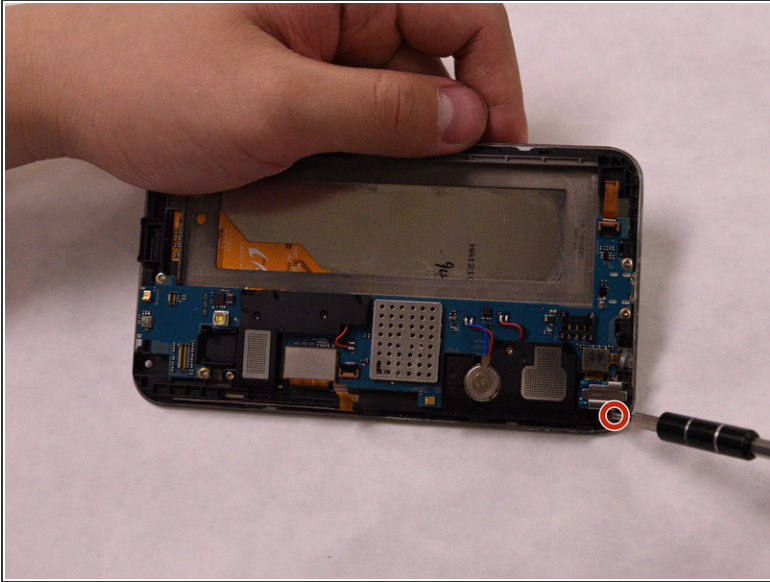



- Use a screwdriver to remove the screw pictured.
- Use a prying tool to remove the headphone jack.
- Set both carefully aside.

## Step 10

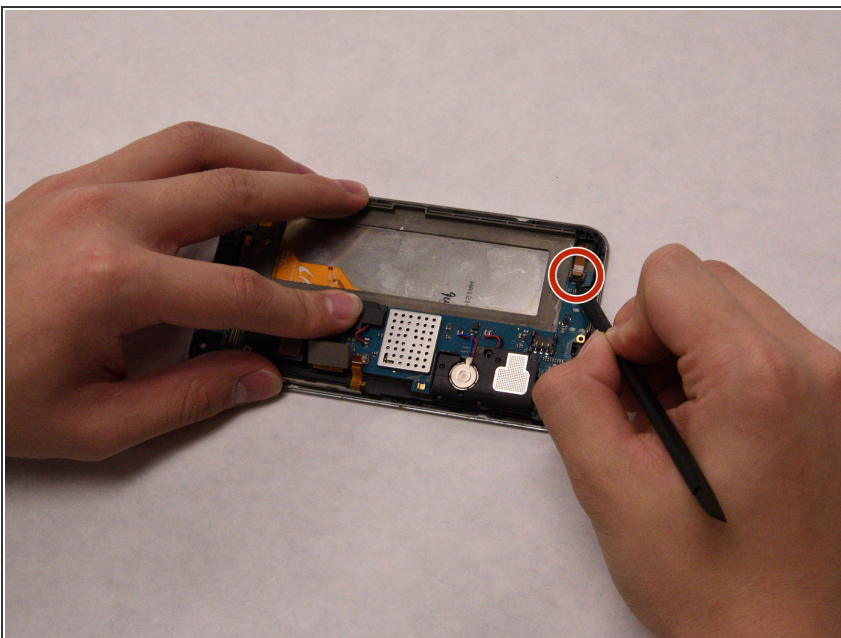




- Disconnect the main button flex cable.
- ⓘ Use a pry tool to open the locker on the motherboard and remove flex cable.

## Step 11

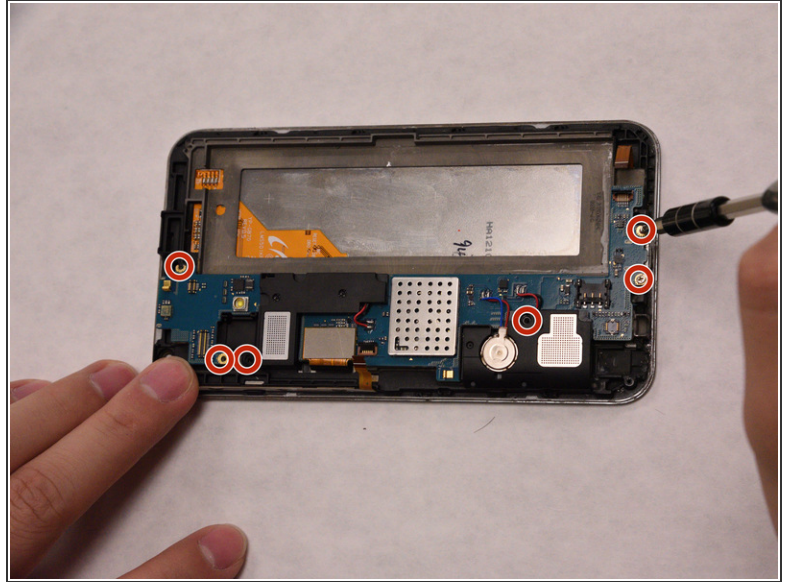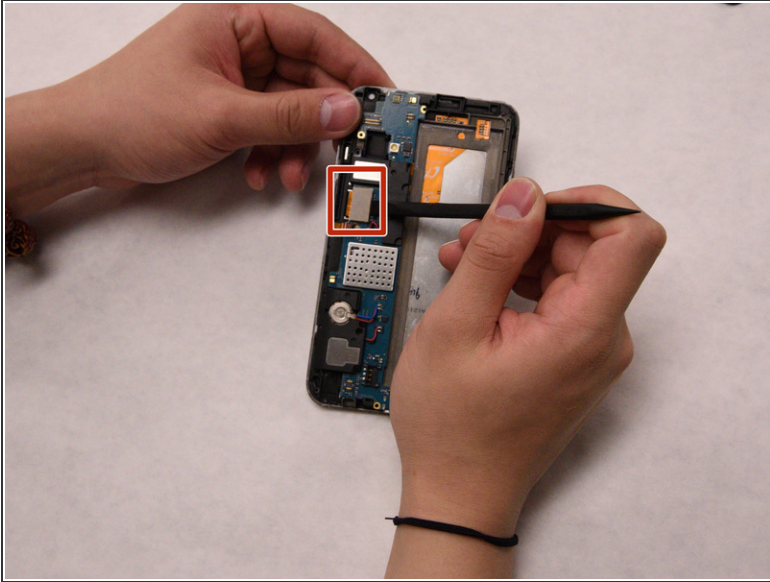

- Disconnect the LCD flex cable.
- Use a screwdriver to remove six screws pictured.

## Step 12

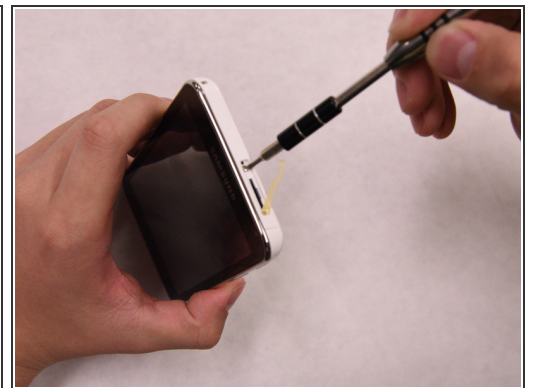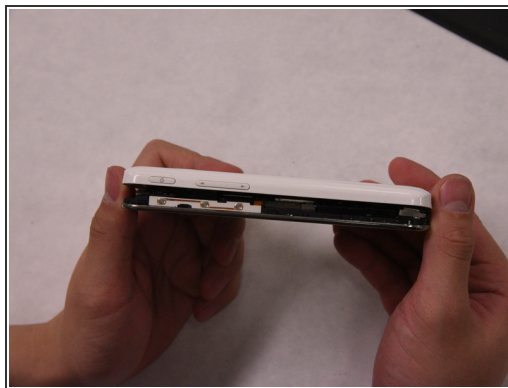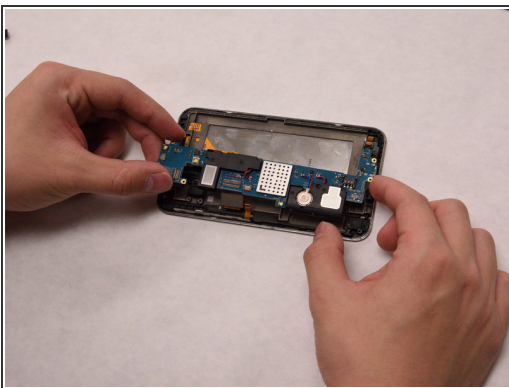

- Hold the PCD unit and lift it up.
- Switch out the old digitizer for the new one. Reconnect all the cables and screws in the reverse sequence.

To reassemble your device, follow these instructions in reverse order.



